

# Contactors KNL43-KNL75

## Accessories

### Thermal overload relay BR63

Setting ranges and maximum permitted back-up fuses

Setting range (A)	Max. back-up fuse gL/gG (A)
17 - 25	100
24.5 - 36	100
35 - 47	125
45 - 60	150
58 - 75	200
72 - 90	250
77 - 97	250

### Tripping curve BR63

